

# PRISM

HARDSCAPES

## Battery Spark Ignition System Quick Start Guide



1. Unscrew the battery cap on the left-hand side of the panel indicating "BATTERY"
2. Insert AAA battery, making sure it is placed with the "+" side facing forward, into the slot. (Battery not included).
3. Replace the battery cap onto the panel.
4. To ignite the burner, turn the igniter knob (right hand side of panel) counterclockwise until it is turned to the "IGNITE" position. Then press and hold the button until the burner flame is started and senses the flame and stays on its own.
5. Once flame is sensed and stays on, you may turn the knob to your desired flame height.  
Note: Flame height may vary due to the gas formulation from your local region and elevation.

### **Troubleshooting tips:**

1. Make sure your batteries are working and have a charge.
2. Check connections to the battery module and all the connections to the valve are snug.
3. If the unit does not hold the flame while turning the control knob, the flame sensor and valve need to be replaced.